User’s Manual

Hyundai HDT-H3

CONTENTS

1 ENVIRONMENT AND SAFETY 5

2 SETTING UP YOUR PHONE 6

System requirement 6
Install your HDT-H3 6
Switch on/off your phone 7
Setup your PC 7
Adjusting the speaker volume on your PC 7
Set your handset's clock 9
Set the clock to 12 hours/24 hours 9

3 ABOUT YOUR PHONE 10

Your HDT-H3 10
Icons on your handset's display 11
Explore the menus 11
Main menu 11
Phonebook 11
Call records menu 11

4 MAKING CALLS 12

Calling Ordinary Phone Number 12
Calling SKYPE Contact 12
Preparatory dialling for SKYPEOUT (pre-dial) 12
Quick dialling 13
End a call 13
Answer a call 13
Making second outgoing call 13
Receive second incoming call 13
Redial a number 13
Handsfree calls 14
Adjusting the volume of the caller's voice 14
Speak to someone privately when you are on a call 14

5 USING YOUR PHONEBOOK 15

To store a name and number 15
Managing your numbers 15
View your ENTRIES 15
Edit your entries 16
Copy your entries 16
Quick dial to entries in your private phonebook 17
Delete an entry from your phonebook 17
Delete all entries in your phonebook 17
How much space is still available in my phonebook? 18
Call a number in your phonebook 18
Call directly from your phonebook 18
Make a preparatory (pre-dial) call from your phonebook 18
Use your phonebook during a call 18

6 ENTERING LETTERS & SPECIAL CHARACTERS 20

7 VOICEMAIL 21

Retrieving Voicemail 21
Deleting Voicemail 21

Deleting All Voicemail 21

8 KEEP TRACK OF YOUR CALLS USING THE CALL RECORDS 22

Find out who has called you and who you have called 22
Check your call records 22
Transfer the call records to your phonebook 22
Delete a call records entry 22
Delete all call records 22
Find out how long you've talked 22
View the call timer 22
Reset the call timer 23
Call a number in your call records 23
Call directly from your call records 23
Make a preparatory (pre-dial) call from your call records 23

9 ADDITIONAL FEATURES 24

Change online status using the handset 24
Keypad lock 24
Forgot where you put the handset(s)? 24

10 PERSONALIZING YOUR PHONE 25

Personalize your phone's display 25
Set your handset's clock and time format 25
Give your phone a name 25
Adjust the Contrast 25
Set your phone's language 25
Change your wallpaper 25
Colour your phone 25
Personalize your sounds 26
Your handset's sounds 26

11 MANAGING YOUR CALLS USING ADVANCED FEATURES 27

Use your phone as … 27
An alarm clock 27
To set the alarm clock 27
When the alarm clock rings 27
A timer ..... **Fel! Bokmärket är inte definierat.**
To set the timer 27
When the timer rings 27
A stopwatch 27
To use the stopwatch 27
Using touch & dial 28
To activate touch & dial 28
To deactivate touch & dial 28
Auto answer 28
Dial mode 28
Recall duration 28
Area code stripping 28

12 MANAGING YOUR DECT PHONES 30

Register a handset 30
Base select 30
Delete a handset 30

CHANGE PIN 31
RESET 31

13 USING MULTI-HANDSETS 32

CALL SOMEONE IN THE HOUSE 32
CALL SOMEONE IN THE HOUSE WHILE YOU ARE TALKING ON THE PHONE 32
TRANSFER YOUR CALL TO ANOTHER HANDSET 32
MAKE A 3-WAY CONFERENCE CALL 32

14 APPENDIX 34

DEFAULT SETTINGS 34
TROUBLESHOOTING 34

1 Environment and safety

Safety information: This telephone is not designed for making emergency telephone calls when the power fails. An alternative should be made available for access to emergency calls.

Power requirements: the computer thru the USB will provide Power.

Battery requirements: The handset requires power source of two rechargeable NiMH batteries, size AAA 1.2V 750mAh (HR11/45). Please do not use non-rechargeable batteries.

WARNING! The electrical network is classified as dangerous according to criteria in the standard IEC 60950. The only way to power down this product is by unplugging the power supply from the electrical outlet. Ensure the electrical outlet is located close to the apparatus and is always easily accessible.

Safety precautions:

- Do not allow the handset to come into contact with liquids or moisture.
- Do not open the handset or base station. This could expose you to high voltages.
- Do not allow the charging contacts of the charger or the battery to come into contact with extraneous conductive materials.
- There is a slight chance that the telephone could be damaged by an electrical storm. It is recommended that users unplug the phone from the USB socket during a storm.
- Do not use the handset in an explosive hazard area such as where there is gas leaking.

Environmental care: Please remember to observe the local regulations regarding the disposal of your packaging materials, exhausted batteries and old phone and where possible promote their recycling.

Because the phone works by sending radio signals between the base unit and the handset, wearers of hearing aids may experience interference in the form of a humming noise.

We advise that this phone should not be used near intensive care medical equipment or by persons with pacemakers.

Your phone can interfere with electrical equipment such as answering machines, TV and radio sets if placed too close. It is recommended that you position the base unit at least one meter from such appliances.

⚠ **CAUTION**
RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. Never use non-rechargeable batteries; use recommended type supplied with this telephone. NiMH batteries must be disposed of in accordance with the applicable waste disposal regulations.

2 Setting up your phone

System requirement

In order to use the phone, your computer should meet the following requirements:
. PC running Windows 2000 or XP
. 400 MHz processor
. 128 MB RAM
. Free USB slot on the PC
. Internet Connection

Install your HDT-H3

1. Connect the USB plug to a USB slot on the PC.

   If you are using a USB hub or docking station, please make sure the USB ports are powered up.

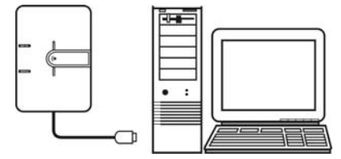

2. Connect the output plug of the mains adapter to the socket on the back of the base unit and the mains adapter to the wall mains supply.

   Connect the telephone line to the phone socket on the back of the base unit and to the wall phone socket.

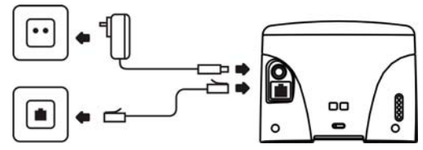

3. Place the 2 rechargeable NiMH AAA batteries (included), observing their polarities, into the battery compartment on the handset.

   Slide the battery door firmly into place.

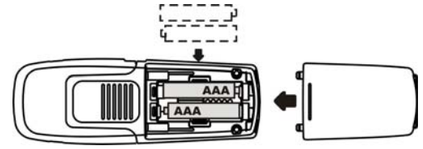

4. Place the handset on the charger unit and let the batteries charge for a full 14 hours before using it for the first time.

   Handset may get warm during initial charge.
   Please note that handset may not turn ON for up to 15 minutes if the batteries are low.

Switch on/off your phone

To switch off the power of your phone:

1. Press and hold during standby.

To switch on the power of your phone:

Press . The battery icon will display in 10 seconds,

or,

Return the handset to the charger; the handset should be automatically turned on.

Power saver
In order to reserve batteries power, the handset will turn itself off 30 minutes after the base has lost power or unplugged from the PC. Please remember to power on the handset when the base is power on.

Setup your PC

To start making Internet calls, please download SKYPE and create a SKYPE account. For information on how to download and use SKYPE, please visit www.skype.com

Before using your phone, please install the software provided in the enclosed CD.

To install the software:

1. Turn on your PC.
2. Insert the disk to your computer.
3. Go to your CD-Rom directory and double click on setup.exe.
4. An installation wizard will guide you through the installation; when finished, a shortcut icon will be created on your desktop.

To start using the phone,

1. Plug in the USB base to your computer's USB.
2. Start the USB driver by double clicking on the shortcut icon created on your desktop; SKYPE should automatically start with the driver.
3. If this is the first time you use the driver, you will see the following screen. Select "Allow this program to use SKYPE" and click OK.

4. Once both SKYPE and the base are detected, your phone is ready for use. Your current SKYPE online status should be shown on the phone's display.

About the USB Driver
Once the USB driver is installed on your PC, it should auto start when you start the PC; a tray icon will be shown when the USB driver is loaded.
Double click on the tray icon will return the ABOUT page of the USB driver, where the current status will be shown. If there are problems with the connection, the problem will be displayed; otherwise CONNECTED will be shown.
You do not have to restart the USB driver unless it was exited. To exit the USB driver, right click on the tray icon and select EXIT

Adjusting the speaker volume on your PC

The speaker volume setting will affect the sound quality of your phone.

Please follow the steps below to adjust your speaker volume.

<table>
<tr>
<td> 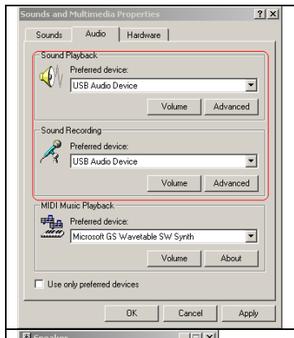
</td>
<td>1. Click on the Start button and select Settings. Select Control Panel.
2. Click on Sound and Multimedia if you are using Windows 2000, or click on Sound and Audio devices if you are using Windows XP.
3. Select the audio Tab from Sound and Multimedia Properties/Sound and Audio devices.
4. Check the “Use only preferred devices” (Windows 2000) or “Use only default devices” (XP) checkbox to separate the audio from going out via the same channel.
5. Select USB audio Device/USB Phone from the Preferred device pulldown menu.
6. Click the Volume button.</td>
</tr>
<tr>
<td>
</td>
<td>7. Adjust the volume using the slider. Close the window when finished.</td>
</tr>
</table>

Set your handset's clock

Once the base is connected to the PC and the software is running, your handset will obtain the current time from the PC.

However, you can still adjust the clock on your handset manually.

To adjust your clock:

1. Press **MENU** during standby.
2. Press **Up** or **Down** to select DISPLAY, and then press **OK**.
3. Press **Up** or **Down** to select CLOCK, and then press **OK**.
4. Press **Left** or **Right** to change the HOUR, and then press **Down**.
5. Press **Left** or **Right** to change the MINUTE.
   If you set the time format of your clock to 12 hours, go to step 6. If you set it to 24 hours, go to step 7.
6. Press **Down**. Press **Left** or **Right** to select AM/PM.
7. Press **OK** to confirm.

SET THE CLOCK TO 12 HOURS/24 HOURS

To change your phone's time format:

1. Press **MENU**.
2. Press **Up** or **Down** to select DISPLAY. Press **OK**.
3. Press **Up** or **Down** to select TIME FORMAT. Press **OK**.
4. Press **Up** or **Down** to select 12 HOURS or 24 HOURS.
5. Press **OK** to confirm.

3 About your phone

Your HDT-H3

Soft Keys
The functions of the soft keys are displayed right above the soft keys. The soft keys' functions are displayed as text in a box, i.e. **MENU**, in this manual.

Rock Key
Use to navigate the menus.
Use to view PHONEBOOK by pressing up or down during standby mode.
Use to view DIALLED by pressing left or right during standby mode.

Talk & Recall Key
Use to make and receive calls.
Use to answer second incoming call.

End & On/Off Key
Use to end a call.
Use to exit menus.
Use to switch the phone on/off.

Star & Ringer Off Key
Use to turn the ringer on/off.

Pound, Key lock & Pause Key
Use to enter a pause.
Use to lock the keypad.

Intercom Key
Use to enter the intercom menu.

SKYPE Key
Use to access SKYPE contact list.

Calls Key
Use to enter the call records menu.

LED
Blink during an incoming call.
Blink during paging.
Turn on steadily during a call.

Page Key
Use to page the handset.
Use to register a handset.

Icons on your handset's display

	Base/Handset link		Name
	Call in progress		Number
	Battery full; 2/3 full; 1/3 full; Empty, please charge.		Volume level; 1 block=lowest volume; 5 blocks=highest volume
	Loudspeaker		Internal melody
	Alarm clock		External melody
	Ringer off		Mode
	Key lock		Volume
	Home Phone/ PSTN Base		Contrast
	Mobile Phone		Office Phone
	Gender		Birthday
	Address (Country, Province, City)		Language
	USB Base		Online Status

Explore the menus

Your phone offers a variety of functions and features that are grouped in the menus.

MAIN MENU

SKYPE
Contacts
User Status
Voicemail

Display
Clock
Time Format
Handset Name
Contrast
Language
Wallpaper
Colour

Sounds
Handset
Base (PSTN)
HS Key Tones
HS Tones

PHONEBOOK

Private
View
  Use Number
  Details
  Edit
  To Shared
  Delete
Add Entry
Quick Dial
  Change
  Delete
Status
Delete All

Advanced
Alarm Clock
Timer
Stopwatch
Touch & Dial
Auto Answer
Dial Mode (PSTN)
Recall (PSTN)
Area Code (PSTN)

System
Register
Base Select
Delete HS
Change PIN
Reset

Shared
View
  Use Number
  Edit
  To Private
  Delete
Add Entry
Status
Delete All

CALL RECORDS MENU

Missed
Use Number
Details
  Use Number
  List
  To Private
  To Shared
  Delete
To Private
To Shared
Delete

Dialled
Use Number
Details
  Use Number
  List
  To Private
  To Shared
  Delete
To Private
To Shared
Delete

Received
Use Number
Details
  Use Number
  List
  To Private
  To Shared
  Delete
To Private
To Shared
Delete

Call Timers
Last Call
Dialled
Received
All Calls
Clear All

Delete Calls
Missed
Dialled
Received
VMWI
All Calls

In menu mode, press anytime or place your phone in the charger for charging to exit the menu and return to standby. Any unconfirmed changes will not be saved.

4 Making Calls

Calling Ordinary Phone Number

1. Press
2. Dial the number you want to call; the number appears on the display and is dialled.

SKYPEOUT
In order to make SKYPEOUT calls, you need to purchase SKYPEOUT credits; please go to http://www.skype.com/store/buy/skypeout.html for further details.
When making SKYPEOUT calls, it is necessary to dial 00, 011 or + as a prefix of the phone number you are calling.
For example, when making calls within North America: 00-1-905-5251258 or 011-1-905-3456622
when making international calls: 00-852-25447555 or +852-90446577

Emergency Calls
This phone is not intended for making emergency calls; please use a PSTN phone in case of emergency.

Entering a +
Simply press and hold the 0 key for 1 second during standby or off hook.

Call timer
The call timer shows the duration of your current call on display.

Out of range warning
If you move too far away from the base unit during a call, your phone will sound an alert tone, and will flash. You need to move closer to the base unit or your call will be disconnected.
If the handset cannot find the base in 30 minutes, it will automatically turn itself off and user will have to manually turn it on again.

Low battery warning
If your phone is almost out of battery during a call, it will sound an alert tone. Place your phone on the charger for charging as soon as possible or it would turn off when it is out of battery. Placing the phone on the charger for charging will end the current call.

Calling SKYPE Contact

1. Press to launch the contact list during standby.

Contact List
The contact list shows the SKYPE contact list of the user who is currently login to SKYPE on the PC. The icon on the left of each entry shows the online status of the contact. If the contact list is not obtained (i.e. user not login), UNAVAILABLE will be returned.

Changing user status
You can also change your online status on the handset. Refer to section 9 for instruction on how to change online status.

Search by letter
Using the keypad, enter the first letter of the name you wish to find. For example, to find “Sam”, press **7** four times, the first contact begins with the letter S is high-lighted.

2. Press **Up** and **Down** to select the contact.

View contact Information
When a contact is highlighted, press **DETAILS** allows you to view the information of the selected contact. Contact’s full name, home/mobile/office phone number, language, address, and online status will be shown.

3. Select the contact to call then press The contact name will be displayed and dialled.

Preparatory dialling for SKYPEOUT (pre-dial)

With pre-dial, you can see and edit the number you are calling on the display before dialling it thru SKYPEOUT.

1. Enter the number you want to call. The number appears on the display.

Deleting digits
Press **CLEAR** to delete an incorrect digit. If you press **CLEAR** on the last digit, your phone will return to standby.

Entering a pause
Press and hold where you want to enter a pause.

2. Press

Saving a number from pre-dial:

1. Enter the number in standby. The number appears on the display.
2. Press **SAVE**.

> ***Memory Full***
> If the phonebook is full, FULL is displayed, and then the phone returns to standby.

3. Enter the name for the record. Refer to section 6: *Entering letters & special characters*. A name must be entered and it must be unique.
4. Press **Down** to go to the next field.
5. Edit the number for the record if necessary. You must enter a number.
6. Press **Down**. Press **Left** or **Right** to select a VIP melody for the record.
7. Press **SAVE** to confirm. The phone returns to standby.

Quick dialling

1. During standby, press and hold a digit key that you have set a quick dial number to and your call is made.
   For information on how to set quick dial numbers, refer to "*Assign a quick dial key"* under section 5: *using your phonebook*.

End a call

1. Press or place the phone on the charger.

Answer a call

When you receive a call, the phone will ring and will flash in the display.

1. Press to answer the call.

> ***Caller id***
> The caller's full name or SKYPE name will be shown on the display.

> ***Turning off the ringer***
> Press **SILENT** when the phone is ringing to turn off the ringer for the call **OR**
> Press and hold when the phone is in standby to turn off the ringer for all the calls. appears when the ringer is turned off. (Press and hold again to turn on the ringer.)

Making second outgoing call

While on a call, you can always make a second outgoing call.

1. While on the first call, press A dial tone should be heard; the first call will be put on hold.
2. To call an ordinary number, enter the number and then press
3. To call a contact, press to obtain the contact list; select the contact to call.
4. Press DETAILS to view the detail of the contact and then press DIAL to make the second call.
5. To return to the first call or to toggle between calls, press
6. To end one of the two calls, simply return to the other call.

Receive second incoming call

While you are on a call, you can pick up a second incoming call.

1. When there is a second incoming call, a call-waiting alert will be heard.
2. Press **to** pick up the second call.
3. Press **again** to return to the first call, and to toggle between the two calls.
4. To end one of the two calls, simply return to the other call.

Redial a number

Your phone records the last 10 contacts or numbers you have dialled. The most recent call is stored at the top of the list. Only the SKYPE name will be stored for SKYPE contact calls.

If you have more than 1 handset, each handset records its own set of dialled number(s).

To redial the last contact dialled:

1. Press
2. Press **REDIAL**. The last dialled contact appears on the display and is dialled.

To redial one of the last 10 dialled numbers:

1. Press **Left** or **Right** during standby. The redial list appears on the display.
2. Press **Up** or **Down** to select the number you wish to redial. Press

Handsfree calls

Handsfree provides the convenience of talking to the caller without holding onto the phone. You can communicate by using a headset or the speaker/microphone of the phone. Handsfree also allows others in the room to be involved in the conversation if you are not using the headset.

If you want to use the headset,

1. Plug in the headset to the headset jack at the side of your phone. You can hear the caller from the earpiece of the headset, and you can speak via the headset's microphone. A headset using a 2.5mm plug can be used.
2. Unplug the headset to end handsfree.

If you want to use the phone's speaker, during a call,

1. Press **OPTIONS**. Press **Up** or **Down** to select SPEAKER. Press **OK**.

   You can hear the caller over the loudspeaker and you can speak via the microphone. will appear on the display.
2. Repeat step 1 to switch off the speaker.

Adjusting the volume of the caller's voice

You can increase or decrease the volume of a caller's voice during a call. There are 5 volume levels for selection.

To adjust the volume, during a call:

1. While the phone is off hook (i.e. dial tone can be heard), press **Up** or **Down**. The display shows the current volume level. Press **Up** or **Down** again to adjust the volume.

Still can't find the most comfortable level?
Besides adjusting the volume on the handset, you might also need to adjust the volume on your PC in order to set the speaker to the most comfortable volume.
Please refer to section 2 – *Adjust the speaker volume on your PC* for information on how to adjust the volume on the

Speak to someone privately when you are on a call

During a call, if you wish to speak to someone privately without having the caller hear your conversation,

1. Press **MUTE**. The caller cannot hear you, but you can hear the caller.
2. Press **UNMUTE** to communicate with your caller again.

5 Using your phonebook

You can use your phonebook to manage your phone entries. Your phone has a private phonebook and a shared phonebook. The information in your private phonebook is stored in your handset; therefore, if you have more than one handset, each handset has its own phonebook.

The information in your shared phonebook is stored in the base unit; therefore, the information can be shared by all the handsets. Your phone must have a link with the base unit in order to use the shared phonebook.

Your private phonebook can store 100 records, and your shared phonebook can store 20 records. Each record can store a name with up to 10 characters and a number with up to 20 digits.

Storing Entries
Please note that contacts on the contact list cannot be stored to the phonebook (both shared and private).

To store a name and number

To access your phonebook,

1. Press **NAMES**.
2. Press **Up** or **Down** to select the phonebook you wish to open, PRIVATE or SHARED. Press **OK** to confirm. Now you are in the private or shared phonebook.

To add an entry to your phonebook,

1. Press **Up** or **Down** to select ADD ENTRY, and then press **OK**.

Memory full
If your phonebook is full, FULL is displayed. You have to delete some records before entering new ones.

2. Enter the name for the record. Refer to section 6: *Entering letters & special characters*. A name must be entered and it must be unique. Press **Down** to continue.
3. Enter the number for the record. You must enter a number.

Entering a pause
Press and hold # where you want to enter a pause.

Entering a +
Press and hold 0 where you want to enter a +.

4. If you are adding an entry in the shared phonebook, press **SAVE** to confirm the information you have entered. Now, you can press to return to standby.
   If you are adding an entry in the private phonebook, press **Down** and continue to step 5.
5. Press **Left** or **Right** to select a VIP melody for the record. If you do not wish to select a VIP melody, go to step 6.

VIP melody
A VIP melody is a melody you can select for a special person. Your phone will ring the selected VIP melody when the calling number has an exact match as the one in your phonebook.

6. Press **SAVE** to confirm the information you have entered.

Duplicate name
You cannot enter an identical name for 2 different records in your phonebook. If so, DUPLICATE NAME REPLACE? is displayed. Press **OK** to replace the existing record with the new entry or press **CANCEL** to return to the previous display and make changes to the name.

Managing your numbers

You can view, edit, copy, and assign quick dialling to each of your numbers.

VIEW YOUR ENTRIES

1. Press **NAMES**.
2. Press **Up** or **Down** to select the phonebook you want to access (PRIVATE or SHARED); press **OK** to continue.
3. Press **Up** or **Down** to select VIEW, and then press **OK**.

4. Press **Up** or **Down** to scroll to the entries you wish to view or search by letter.

Search by letter
Using the keypad, enter the first letter of the name you wish to find. For example, to find “Sam”, press **7** four times, the first entry begins with the letter S is high-lighted.

   If you are in the PRIVATE phonebook, go to step 5. If you are in the SHARED phonebook, go to step 8.
5. To view the details of your entries, go to step 6 or press **Up** or **Down** to continue scrolling.
6. Press **OPTIONS**.
7. Press **Up** or **Down** to select DETAILS. Press **OK**. The details of the entry you selected are displayed.
8. Press **Up** or **Down** to view the details of the other entries in your phonebook.

EDIT YOUR ENTRIES

1. Press **NAMES**.
2. Press **Up** or **Down** to select the phonebook you want to open, PRIVATE or SHARED; press **OK** to continue.
3. Press **Up** or **Down** to select VIEW, and then press **OK**.
4. Press **Up** or **Down** to scroll to the entries you wish to edit or search by letter.
   If you selected PRIVATE, go to step 5. If you selected SHARED, go to step 8.
5. To view the details of your entries before editing, go to step 6. If not, go to step 8.
6. Press **OPTIONS**.
7. Press **Up** or **Down** to select DETAILS. Press **OK**. The details of the entry you selected are displayed.
8. Press **OPTIONS**. Press **Up** or **Down** to select EDIT, and then press **OK**.
9. Edit the name and number using the keypad. Press **CLEAR** to erase a character or digit.
   If you are editing an entry in the private phonebook, you can also change the VIP melody.
10. Press **SAVE** to confirm all your changes. The display will show the entry you just edited.

COPY YOUR ENTRIES

Information of the entries can be shared by copying the entries from the private phonebook to the shared phonebook and vice versa.

1. Press **NAMES**.
2. Press **Up** or **Down** to select the phonebook you want to open, PRIVATE or SHARED. Press **OK**.
3. Press **Up** or **Down** to select VIEW. Press **OK**. Press **Up** or **Down** to scroll to the entry you wish to copy or search by letter.
   If you are in the PRIVATE phonebook, go to step 4. If you are in the SHARED phonebook, go to step 6.
4. To view the details of your entries before copying, go to step 5; otherwise go to step 6.
5. Press **OPTIONS**. Press **Up** or **Down** to select DETAILS. Press **OK**. The details of the entry you selected are displayed.
6. Press **OPTIONS**.
7. To copy to the shared phonebook, press **Up** or **Down** to select TO SHARED. Press **OK**.
   To copy to the private phonebook, press **Up** or **Down** to select TO PRIVATE. Press **OK**.
8. Edit the name and number using the keypad. Press **CLEAR** to erase a character or digit.
9. Press **SAVE** to confirm.

QUICK DIAL TO ENTRIES IN YOUR PRIVATE PHONEBOOK

This feature allows you to dial to the entries in your private phonebook by pressing and holding a quick dial key that you have assigned. You can assign 9 quick dial keys (keys 1-9).

NOTE: Contacts on the contact list cannot be assigned to quick dial keys.

Assign a quick dial key

1. Press **NAMES**.
2. Press **Up** or **Down** to select PRIVATE, and then press **OK**.
3. Press **Up** or **Down** to select QUICK DIAL. Press **OK**. The first quick dial key is displayed.
4. Press **Up** or **Down** to scroll to the quick dial key you wish to use.
   If no number is assigned to the quick dial key, the display shows EMPTY. To assign a number, press **SELECT**, and then go to step 6.
   If there is already a number assigned to the quick dial key, the display shows the name and number of the entry. To assign a new number, go to step 5.
5. Press **OPTIONS**. Press **Up** or **Down** to select CHANGE. Press **OK**.
6. The display shows a list of entries in your private phonebook.
7. Press **Up** or **Down** to select the entry you wish.
8. Press **DETAILS**. The display shows the details of the entry that you selected. Press **OK** to confirm.

Delete a quick dial key

1. Press **NAMES**.
2. Press **Up** or **Down** to select PRIVATE, and then press **OK**.
3. Press **Up** or **Down** to select QUICK DIAL, and then press **OK**. The first quick dial key is displayed.
4. Press **Up** or **Down** to scroll to the quick dial key you wish to delete.
5. Press **OPTIONS**. Press **Up** or **Down** to select DELETE. Press **OK**.
6. CONFIRM? is displayed. Press **OK** to confirm.

DELETE AN ENTRY FROM YOUR PHONEBOOK

1. Press **NAMES**.
2. Press **Up** or **Down** to select the phonebook you want to access, PRIVATE or SHARED. Press **OK**.
3. Press **Up** or **Down** to select VIEW. Press **OK**.
4. Press **Up** or **Down** to scroll to the entry you wish to delete or search by letter.
   If you are in the PRIVATE phonebook, go to step 5.
   If you are in the SHARED phonebook, go to step 7.
5. To view the details of your entries before deleting, go to step 6. If not, go to step 7.
6. Press **OPTIONS**. Press **Up** or **Down** to select DETAILS. Press **OK**. The details of the entry you selected are displayed.
7. Press **OPTIONS**.
8. Press **Up** or **Down** to select DELETE. Press **OK**. CONFIRM? is displayed. Press **OK** to confirm.

DELETE ALL ENTRIES IN YOUR PHONEBOOK

1. Press **NAMES**.
2. Press **Up** or **Down** to select the phonebook you want to open, PRIVATE or SHARED. Press **OK**.
3. Press **Up** or **Down** to select DELETE ALL. Press **OK**. CONFIRM? is displayed. Press **OK** to confirm.

How much space is still available in my phonebook?

Your phone keeps track of how much memory you have used and how much is still available in your phonebook.

1. Press **NAMES**.
2. Press **Up** or **Down** to select the phonebook you want to open, PRIVATE or SHARED. Press **OK**.
3. Press **Up** or **Down** to select STATUS. Press **OK** to view the status. Press **OK** when finished.

Call a number in your phonebook

While you are viewing your phonebook, you can make a call to the entry you wish. You can also open your phonebook during a call.

CALL DIRECTLY FROM YOUR PHONEBOOK

1. Press **NAMES**.
2. Press **Up** or **Down** to select the phonebook you want to open, PRIVATE or SHARED. Press **OK**.
3. Press **Up** or **Down** to select VIEW. Press **OK**.
4. Press **Up** or **Down** to scroll to the entry you wish to call or search by letter.
   If you are in the PRIVATE phonebook, go to step 5.
   If you are in the SHARED phonebook, go to step 8.
5. To view the details of the entry before calling, go to step 6. If not, go to step 8.
6. Press **OPTIONS**.
7. Press **Up** or **Down** to select DETAILS. Press **OK**. The details of the entry you selected are displayed.
8. Press .

NOTE: If there is no entry being stored in the PHONEBOOK, EMPTY will result.

MAKE A PREPARATORY (PRE-DIAL) CALL FROM YOUR PHONEBOOK

With pre-dial, you can edit the phone number you wish to call before dialling.

1. Press **NAMES**.
2. Press **Up** or **Down** to select the phonebook you want to open, PRIVATE or SHARED. Press **OK**.
3. Press **Up** or **Down** to select VIEW. Press **OK**.
4. Press **Up** or **Down** to scroll to the entry you wish to call or search by letter.
   If you are in the PRIVATE phonebook, go to step 5.
   If you are in the SHARED phonebook, go to step 8.
5. To view the details of the entry before calling, go to step 6. If not, go to step 8.
6. Press **OPTIONS**.
7. Press **Up** or **Down** to select DETAILS. Press **OK**. The details of the entry you selected are displayed.
8. Press **OPTIONS**.
9. Press **Up** or **Down** to scroll to USE NUMBER. Press **OK**. The phone number appears on the display.
10. Press **CLEAR** or **Left** or **Right** to edit the phone number or press to make the call.

USE YOUR PHONEBOOK DURING A CALL

To view your phonebook during a call,

1. Press **OPTIONS**.
2. Press **Up** or **Down** to select PHONEBOOK. A list of entries in your private phonebook is displayed.
3. Press **Up** or **Down** to select the entry you wish to view or search by letter.
4. Press **DETAILS**. The details of the entry are displayed.
5. Press **CANCEL** 3x to return to the call.

To make a call from your phonebook during a call,

1. Press **OPTIONS**.
2. Press **Up** or **Down** to select PHONEBOOK. A list of entries in your phonebook is displayed.
3. Press **Up** or **Down** to select the entry you wish to view or search by letter.

4. Press **DETAILS**. The details of the entry are displayed.
5. Press **DIAL**.

6 Entering letters & special characters

You can enter letters, numbers, and special characters for your handset name, the phonebook record name and other menus.

To enter letters and special characters:

1. Find the key with the letter or number or special characters you wish to enter.
2. Press it as many times as you need until the letter or number or special character appears on the display.

Entering space & special characters/symbols

Press **1** once to enter a space. Press **0** or * to enter the symbols you wish.

Changing case

Press #. The next letter you entered will be in the opposite case.

Erasing characters

Press **CLEAR**. The character on the left of the cursor is erased.

Moving the cursor

Press **Left** or **Right** to move the cursor around.

7 Voicemail

Your phone allows you to access your SKYPE voicemail box with just a few presses.

SKYPEVOICEMAIL
To get a voicemail account, please go to http://www.skype.com/products/skypevoicemail/ for further details.

You have new Voicemail
When there are new voicemails waiting for you, the LED on the handset will be blinking and will appear on the top line of the display during standby. The LED will be off and the icon will be gone when there is no more new message in your voicemail box.

Retrieving Voicemail

1. Press **MENU**.
2. Press **Up** or **Down** to select SKYPE. Press **OK**.
3. Press **Up** or **Down** to select VOICEMAIL. Press **OK**.
4. Press **Up** or **Down** to select VIEW. Press **OK**.
5. Press **Up** or **Down** again to select the message you would like to retrieve;
6. Press **PLAY** to listen to the message.

Which messages are new messages?
When you are browsing the voicemail list, you will see an icon on the left of each voicemail. These icons indicate which messages are retrieved and new. If the icon next to the voicemail is , that means this piece of voicemail is already retrieved; if the icon next to the voicemail is , that means this piece of voicemail is new. After a new voicemail is heard, the icon of that voicemail will be updated.

Deleting Voicemail

1. Press **MENU**.
2. Press **Up** or **Down** to select SKYPE. Press **OK**.
3. Press **Up** or **Down** to select VOICEMAIL. Press **OK**.
4. Press **Up** or **Down** to select VIEW. Press **OK**.
5. Press **Up** or **Down** again to select the message you would like to retrieve;
6. Press **DELETE**; a confirmation prompt should be shown; press **OK.**

Deleting All Voicemail

1. Press **MENU**.
2. Press **Up** or **Down** to select SKYPE. Press **OK**.
3. Press **Up** or **Down** to select VOICEMAIL. Press **OK**.
4. Press **Up** or **Down** to select DELETE ALL. Press **OK**.
5. A confirmation prompt should be shown; press **OK.**

8 Keep track of your calls using the call records

Find out who has called you and who you have called

Your phone keeps a record each time you make, receive or miss a call. You can access a list of the last 15 calls that you have missed and a list of the last 10 calls you have dialled and the last 5 calls you have received. You can keep track of who you've talked to and for how long.

CHECK YOUR CALL RECORDS

1. Press .
2. Press **Up** or **Down** to select MISSED, DIALLED or RECEIVED.
3. Press **OK**. A list of call records is displayed. Press **Up** or **Down** to scroll the list.
   To view the details of a call records entry, go to step 4.
4. Press **OPTIONS**. Press **Up** or **Down** to select DETAILS. Press **OK**.

TRANSFER THE CALL RECORDS TO YOUR PHONEBOOK

To save the phone number of your family, friends, and colleagues, you can transfer the call records to your phonebook if you do not already have their information.

1. Press .
2. Press **Up** or **Down** to select MISSED, DIALLED or RECEIVED.
3. Press **OK**. A list of call records is displayed. Press **Up** or **Down** to scroll the list.
   To view the details of the call records entry, go to step 4. If not, go to step 5.
4. Press **OPTIONS**. Press **Up** or **Down** to select DETAILS. Press **OK**.
5. Press **OPTIONS**. Press **Up** or **Down** to select TO SHARED if copying to the shared phonebook or TO PRIVATE if copying to the private phonebook. Press **OK**.
6. Add or edit the name using the keypad. Press **CLEAR** to erase a character or digit. There must be a name.
7. Press **Down**. Add or edit the number using the keypad. Press **CLEAR** to erase a digit. There must be a number.
   Copying to the private phonebook, go to step 8. Copying to the shared phonebook, go to step 9.
8. Press **Down**. Press **Left** or **Right** to select a VIP melody.
9. Press **SAVE** to confirm all you've entered.

DELETE A CALL RECORDS ENTRY

1. Press .
2. Press **Up** or **Down** to select MISSED, DIALLED or RECEIVED.
3. Press **OK**. A list of call records is displayed. Press **Up** or **Down** to scroll the list.
   To view the details of a call records entry, go to step 4. If not, go to step 5.
4. Press **OPTIONS**. Press **Up** or **Down** to select DETAILS. Press **OK**.
5. Press **OPTIONS**. Press **Up** or **Down** to select DELETE. CONFIRM? is displayed. Press **OK** to confirm.

DELETE ALL CALL RECORDS

You can delete each individual (missed, dialled, received) call records list or delete all the call records lists at once.

To delete individual/all call records list:

1. Press .
2. Press **Up** or **Down** to select DELETE CALLS. Press **OK**.
3. Press **Up** or **Down** to select MISSED, DIALLED, RECEIVED, VMWI or ALL CALLS. Press **OK**.
4. CONFIRM? is displayed. Press **OK** to confirm.

Find out how long you've talked

Your phone has a call timer that records how long you have spent on your last call, dialled calls, received calls, and all calls.

VIEW THE CALL TIMER

1. Press .
2. Press **Up** or **Down** to select CALL TIMERS. Press **OK**.
3. Press **Up** or **Down** to select LAST CALL, DIALLED, RECEIVED, or ALL CALLS.
4. Press **OK**. The time you spent on the calls is displayed.
5. Press **OK** when finished.

RESET THE CALL TIMER

1. Press .
2. Press **Up** or **Down** to select CALL TIMERS. Press **OK**.
3. Press **Up** or **Down** to select CLEAR ALL. Press OK. CONFIRM? is displayed.
4. Press **OK** to confirm. The call timer is reset and will start counting from 0 seconds.

Call a number in your call records

While you are reviewing the call records, you can make a call or return a call to the person.

CALL DIRECTLY FROM YOUR CALL RECORDS

1. Press .
2. Press **Up** or **Down** to select MISSED, DIALLED or RECEIVED.
3. Press **OK**. A list of call records is displayed. Press **Up** or **Down** to scroll the list.
   To view the details of a call records entry, go to step 4. If not, go to step 5.
4. Press **OPTIONS**. Press **Up** or **Down** to select DETAILS. Press **OK**.
5. Press .

MAKE A PREPARATORY (PRE-DIAL) CALL FROM YOUR CALL RECORDS

With pre-dial, you can edit the phone number you wish to call before dialling.

1. Press .
2. Press **Up** or **Down** to select MISSED, DIALLED or RECEIVED.
3. Press **OK**. A list of call records is displayed. Press **Up** or **Down** to scroll the list.
   To view the details of a call records entry, go to step 4. If not, go to step 5.
4. Press **OPTIONS**. Press **Up** or **Down** to select DETAILS. Press **OK**.
5. Press **OPTIONS**. Press **Up** or **Down** to select USE NUMBER. Press **OK**.
6. Press **CLEAR** or **Left** or **Right** to edit the phone number or press to make the call.

9 Additional features

Change online status using the handset

You can change your online status anytime without going back to your computer.

1. Press **MENU**.
2. Press **Up** or **Down** to select IM CONFIG. Press **OK**.
3. Press **Up** or **Down** to select USER STATUS. Press **OK**.
4. Select the online status you want others to see.
5. Press **OK** to confirm.

Keypad lock

Locking the keypad prevents accidental key presses when you put your phone in the pocket.

To lock the keypad:

1. Press and hold # during standby. is displayed. The keypad is locked. Nothing will happen when you press a key on the phone except pressing **UNLOCK**.

NOTE: When a call comes in, your keypad becomes active. When you end the call, your keypad will be locked again.

To unlock the keypad:

1. Press **UNLOCK**. UNLOCK? is displayed. Press **OK**. The keypad is unlocked.

Forgot where you put the handset(s)?

Just page your handsets, and they will reveal themselves.

To page your handset(s):

1. Press and release on the base unit. All the handsets in standby or screen saver mode connected to that base unit will play a paging melody.

Not ringing?
A handset will not play the paging melody if it is powered off or on an outside call; however, all the other handsets will still

To stop the paging melody:

1. Press and release on the base unit, and all the handsets will stop paging **OR**
   Press **STOP** on a handset and that handset will stop paging. All the other handsets will keep playing the paging melody.

NOTE: If an external call comes in, all the handsets will stop paging, and play the external call melody.

NOTE: The paging melody will last for 30 seconds if no key is pressed.

10 Personalizing your phone

Your phone comes with a colour display and a selection of ringing melodies. Personalize your phone to make it the way you want it to look and the way you want it to sound.

Personalize your phone's display

SET YOUR HANDSET'S CLOCK AND TIME FORMAT

The time appears on the handset is obtained from the PC the base unit is connected to.

Please refer to section 2: *setting up your phone*.

GIVE YOUR PHONE A NAME

Your phone comes with a name from the factory. You can give your phone a different name. If you have more than 1 handset, you can give each handset its own name.

To name your phone:

1. Press **MENU**.
2. Press **Up** or **Down** to select DISPLAY. Press **OK**.
3. Press **Up** or **Down** to select HANDSET NAME. Press **OK**.
4. Enter or edit the name. See section 6: *entering letters & special characters* for information on how to enter characters.
5. Press **OK** to confirm.

ADJUST THE CONTRAST

Change the contrast of your LCD.

1. Press **MENU**.
2. Press **Up** or **Down** to select DISPLAY. Press **OK**.
3. Press **Up** or **Down** to select CONTRAST. Press **OK**.
4. Press **Left/Right** or **Up/Down** to select the proper contrast.
5. Press **OK** to confirm.

SET YOUR PHONE'S LANGUAGE

Change the language on your phone.

1. Press **MENU**.
2. Press **Up** or **Down** to select DISPLAY. Press **OK**.
3. Press **Up** or **Down** to select LANGUAGE. Press **OK.**
4. Press **Up** or **Down** to select the language. Press **OK** to confirm.

CHANGE YOUR WALLPAPER

Change the wallpaper to give your phone a refresh look with your style.

1. Press **MENU**.
2. Press **Up** or **Down** to select DISPLAY. Press **OK**.
3. Press **Up** or **Down** to select WALLPAPER. Press **OK**.
4. Press **Up** or **Down** to select the wallpaper. Press **OK** to confirm.

COLOUR YOUR PHONE

Change the colour of the menus, highlight, and background of your phone to your colour.

1. Press **MENU**.
2. Press **Up** or **Down** to select DISPLAY. Press **OK**.
3. Press **Up** or **Down** to select COLOUR. Press **OK**.
4. Press **Up** or **Down** to select the colour. The colour of the menus will change as you select the different colours.
5. Press **OK** to confirm.

Personalize your sounds

YOUR HANDSET'S SOUNDS

You can assign different ringing melodies for each handset at different volume levels. To find out if it is a call from inside or outside the house, you can assign different ringing melodies for external and internal calls.

Your phone sounds key press tones and confirmation tones.

Key tones are tones that your phone makes each time you press a key on the phone.

Confirmation tones are tones that your phone makes when an operation is successful.

Parking tones are sounded when you place your phone on the charging unit.

To set your handset's ringing melodies and volume:

1. Press **MENU**.
2. Press **Up** or **Down** to select SOUNDS. Press **OK**.
3. Press **Up** or **Down** to select HANDSET. Press **OK**.
4. Press **Left** or **Right** to change the volume level. Press **Down**.
5. Press **Left** or **Right** to select the external melody. Press **Down**.
6. Press **Left** or **Right** to select the internal melody. Press **OK** to confirm when finished.

To set your handset's key tones

1. Press **MENU**.
2. Press **Up** or **Down** to select SOUNDS. Press **OK**.
3. Press **Up** or **Down** to select HS KEY TONES. Press **OK**.
4. Press **Up** or **Down** to select ON or OFF. Press **OK** to confirm.

To set your handset's confirmation/parking tones

1. Press **MENU**.
2. Press **Up** or **Down** to select SOUNDS. Press **OK**.
3. Press **Up** or **Down** to select HS TONES. Press **OK**.
4. Press **Up** or **Down** to select ON or OFF. Press **OK** to confirm.

To set your base's ringing melody and volume:

1. Press **MENU**.
2. Press **Up** or **Down** to select SOUNDS. Press **OK**.
3. Press **Up** or **Down** to select BASE. Press **OK**.
4. Press **Left** or **Right** to change the volume level.
5. Press **Down**. Press **Left** or **Right** to select the melody. Press **OK** to confirm.

11 Managing your calls using advanced features

Use your phone as …
An alarm clock

TO SET THE ALARM CLOCK

1. Press **MENU**.
2. Press **Up** or **Down** to select ADVANCED. Press **OK**.
3. Press **Up** or **Down** to select ALARM CLOCK. Press **OK**.
4. Press **Up** or **Down** to select ON or OFF.
   To set on the alarm clock, press **OK** and continue to step 5.
   To set off the alarm clock, press **OK** to confirm.
5. Press **Left** or **Right** to set the HOUR. Press **Down**.
6. Press **Left** or **Right** to set the MINUTE.
   If your phone's time format is set to 12 hours, go to step 7. If it is 24 hours, go to step 8.
7. Press **Down**. Press **Left** or **Right** to set AM/PM.
8. Press **OK** to confirm.

WHEN THE ALARM CLOCK RINGS

1. Press **STOP** to turn off and deactivate the alarm clock **OR**
2. Press **SNOOZE**. The alarm clock will ring again in 10 minutes.

NOTE: When the alarm clock is ringing, if you do not press any key in 1 minute, it will snooze for 10 minutes and then ring

A timer

Afraid you might have forgotten putting a chicken in the oven? You can set a time, and your phone will do the countdown. It will ring after the time you've set has elapsed.

TO SET THE TIMER

1. Press **MENU**.
2. Press **Up** or **Down** to select ADVANCED. Press **OK**.
3. Press **Up** or **Down** to select TIMER. Press **OK**.
4. Press **Left** or **Right** to set the HOUR. Press **Down**.
5. Press **Left** or **Right** to set the MINUTE. Press **Down**.
6. Press **Left** or **Right** to set the SECOND.
7. Press **OK** to confirm. The timer starts counting and your can see the timer on display.

WHEN THE TIMER RINGS

The timer will ring once it finishes counting the time you set.

1. Press **STOP**. The countdown timer will stop ringing.

NOTE: When the timer is ringing, if you do not press any key in 1 minute, it will stop ringing.

A stopwatch

Need to know how long it took you to run 6 laps or how long your presentation is? Your stopwatch starts counting once you press **START** on your phone.

TO USE THE STOPWATCH

1. Press **MENU**.
2. Press **Up** or **Down** to select ADVANCED. Press **OK**.
3. Press **Up** or **Down** to select STOPWATCH. Press **OK**.
4. Press **START**. The stopwatch starts counting.
   Press **STOP**. The stopwatch stops. You can choose to reset the stopwatch or cancel the stopwatch.

Press **PAUSE**. The stopwatch pauses counting. Press **RESUME** to start the stopwatch again from the paused time.
Press **CANCEL**. The stopwatch is deactivated.

Using touch & dial

> **NOTE**: Your phone must be registered to use this feature.

Touch & dial allows you to call a number by pressing any key (except **CANCEL** and) on your handset.

TO ACTIVATE TOUCH & DIAL

1. Press **MENU**.
2. Press **Up** or **Down** to select ADVANCED. Press **OK**.
3. Press **Up** or **Down** to select TOUCH & DIAL. Press **OK**.
4. Press **Left** or **Right** to select ON. Press **Down**. Enter the phone number.
5. Press **OK** to confirm. Your phone returns to standby.
   If activated, TOUCH & DIAL is displayed.

TO DEACTIVATE TOUCH & DIAL

1. Press **CANCEL**. CONFIRM? is displayed.
2. Press **OK** to confirm. Your phone returns to normal mode

Auto answer

Auto answer gives you the convenience of answering a call by just picking up the phone from the charger. You do not need to press any key to answer the call.

To activate or deactivate auto answer:

1. Press **MENU**.
2. Press **Up** or **Down** to select ADVANCED. Press **OK**.
3. Press **Up** or **Down** to select AUTO ANSWER. Press **OK**.
4. Press **Up** or **Down** to select ON or OFF. Press **OK**.

The following features are available when you linked the handset to the PSTN base only; Unavailable will be returned if handset is linked to USB base and one of the following items is selected.

Dial mode

Your phone is set to tone dialling. You can switch to pulse dialling if necessary.

To change dial mode:

1. Press **MENU**.
2. Press **Up** or **Down** to select ADVANCED. Press **OK**.
3. Press **Up** or **Down** to select DIAL MODE. Press **OK**.
4. Press **Up** or **Down** to select TONE or PULSE. Press **OK**.

Recall duration

Your phone comes with 2 factory programmed recall durations. Check with your local telephone company if you are not sure which duration to use.

1. Press **MENU**.
2. Press **Up** or **Down** to select ADVANCED. Press **OK**.
3. Press **Up** or **Down** to select RECALL. Press **OK**.
4. Press **Up** or **Down** to select RECALL 1 or RECALL 2. Press **OK**.

Area code stripping
This section is applicable to models with Area Code Stripping option only.
Area code stripping removes an area code as specified by you from any incoming caller id.
To activate and program the area code to be stripped:

1. Press **MENU**.
2. Press **Up** or **Down** to select ADVANCED. Press **OK**.
3. Press **Up** or **Down** to select AREA CODE. Press **OK**.
4. Press **Left** or **Right** to select ON.
7. Press **Down**. Enter area code. Press **OK** to confirm.

The area code can be up to 5 digits long. The area code will be removed from any caller id that begins with the same

12 Managing your DECT phones

NOTE: Your phone must have a link with the base unit in order to use any system features mentioned in this section EXCEPT for registering a handset.

Register a handset

You can register your phone to up to 4 base units. Each base unit can register up to 4 handsets.

Your handset is registered to the base unit by default and is ready to use. You only have to register your handset if UNREGISTERED is displayed.

To register your handset when UNREGISTERED:

1. Press **REG**.
2. Press **OK** to select REGISTER.
3. Press and hold on the base unit until the IN USE LED on the base flashes (or until you hear some tones from PSTN base).
4. Enter the PIN code. (Default 0000)
5. Press **OK**. You will see a confirmation screen when registration is completed.

NOTE: If you want to delete a registered handset, SUCCESSFUL will appear on your display screen.
If you want to delete an unregistered handset, FAILED will appear on your display screen.

If registration is successful, the handset will display its name and number. The icon, which indicates the link between your phone and the base unit, will display steadily with the battery icon . This state is referred as “standby”.

If registration fails, a warning screen will display. The handset will not display the handset number. will flash. You need to repeat the above procedure.

To register your phone to an additional base unit:

1. Press **MENU**.
2. Press **Up** or **Down** to select SYSTEM. Press **OK**.
3. Press **Up** or **Down** to select REGISTER. Press **OK**.
4. Press and hold on the base unit for 4 seconds; the IN USE LED on the base flashes (or you hear some tones from the PSTN base).
5. Enter the PIN code on your handset. (Default 0000)
6. Press **OK**. You will see a confirmation screen when registration is completed.

Base select

Your phone may be registered to up to 4 base units.

When your phone is registered to more than 1 base unit, you can select a base unit through which you want your handset to operate.

To select a base, either:

1. Press and hold **MENU** for one second; you should see the BASE SELECT page.
2. Press **Up** or **Down** to select the base you wish. Press **OK**.

OR

1. Press **MENU**.
2. Press **Up** or **Down** to select SYSTEM. Press **OK**.
3. Press **Up** or **Down** to select BASE SELECT. Press **OK**.
4. Press **Up** or **Down** to select the base you wish. Press **OK**.

Delete a handset

You can delete any handsets from the base unit. Once you delete a handset, that handset will no longer have a link with the base unit.

The information in the private phonebook and call records is still available to you. However, you will no longer have access to the shared phonebook or any features related to the base from the deleted handset.

1. Press **MENU**.
2. Press **Up** or **Down** to select SYSTEM. Press **OK**.
3. Press **Up** or **Down** to select DELETE HS. Press **OK**.
4. Press **Up** or **Down** to select the handset to be deleted. Press **OK**.
5. Enter your PIN code. Press **OK**.

Change PIN

A PIN (personal identification number) code is required to access some of the menus in your phone. This ensures secure access to your phone.

The factory preset code is “0000”. You can change it to a unique code of your own.

1. Press **MENU**.
2. Press **Up** or **Down** to select SYSTEM. Press **OK**.
3. Press **Up** or **Down** to select CHANGE PIN. Press **OK**.
4. Enter your current PIN code. Press **OK**.
5. Enter the new PIN code. Press **OK**.
6. Enter the new PIN code again. Press **OK**.

Reset

You can reset the display, sounds, and other settings of your phone. Refer to the default settings on Page 34.

1. Press **MENU**.
2. Press **Up** or **Down** to select SYSTEM. Press **OK**.
3. Press **Up** or **Down** to select RESET. Press **OK**.
4. Enter your PIN code. Press **OK**. CONFIRM? is displayed.
5. Press **OK** to confirm. Your phone returns to standby.

13 Using multi-handsets

NOTE: You need at least 2 handsets to carry out the functions mentioned in this section.

Call someone in the house

You can call someone in the house by using the intercom function on your phone.

To make an intercom call:

1. Press INT. Press **Up** or **Down** to select the handset you want to call. Press **OK**.
2. Wait for the other handset to answer your call.

To exit intercom:

1. Press .

If an external call comes in while you are on an intercom call, the caller id will display.

To answer the call:

1. Press to end the intercom call.
2. Press to answer the external call.

Call someone in the house while you are talking on the phone

While you are on an outside call, you can put the outside call on hold and make a call (inquiry call) to someone in the house.

To make an inquiry call, during an outside call:

1. Press INT **OR**
   Press **OPTIONS**. Press **Up** or **Down** to select INTERCOM. Press **OK**.
2. Press **Up** or **Down** to select the handset you want to call. Press **OK**.
3. Wait for the other handset to answer your call.

To return to the outside caller:

1. Press **OPTIONS**.
2. Press **Up** or **Down** to select OUTSIDE CALL. Press **OK**. Your inquiry call is ended.

Transfer your call to another handset

During an outside call,

1. Press INT **OR**
   Press **OPTIONS**. Press **Up** or **Down** to select INTERCOM. Press **OK**.
2. Press **Up** or **Down** to select the handset you want to transfer. Press **OK**.
3. Wait for the other handset to answer your call.
4. When the other handset has answered your call, press **OR**
   Press **OPTIONS**. Press **Up** or **Down** to select TRANSFER. Press **OK**. The outside call is transferred.

Make a 3-way conference call

Your can connect an outside call and an inside call and talk to both of them at the same time.

During an outside call,

1. Press INT **OR**
   Press **OPTIONS**. Press **Up** or **Down** to select INTERCOM. Press **OK**.
2. Press **Up** or **Down** to select the handset you want to call. Press **OK**.

3. Wait for the other handset to answer your call.
4. When the other handset has picked up the call. Press **OPTIONS**.
5. Press **Up** or **Down** to select CONFERENCE. Press **OK**. You are now in a conference call.

To exit conference:

1. Press **OR**
   Press **OPTIONS**. Press **Up** or **Down** to select EXIT CONF. Press **OK**.

14 Appendix

Default Settings

Handset Name*	*HDT-H3*	Touch and Dial	*Off*
Time Format	*24 hours*	Touch and Dial Number	*Empty*
Language	*Spanish*	Quick Dial	*Off*
Wallpaper	*Wallpaper 1*	Quick Dial Numbers	*Empty*
Colour	*Colour 1*	PIN Code	*0000*
Handset Ring Volume	*Maximum*	Base Selection	*Base 1*
Handset External Ring Melody	*Melody 2*	LCD Contrast Level*	*2*
Handset Internal Ring Melody	*Melody 3*	Receiver Volume	*Medium*
PSTN Base Volume	*Off*	Message waiting indication	*Off*
PSTN Base Melody	*Melody 1*	Last Call Timer	*Reset*
Key Beep	*On*	Dialled Call Timer	*Reset*
Confirmation/Parking Tone	*On*	Received Call Timer	*Reset*
Alarm Clock	*Off*	All Calls Timer	*Reset*
Countdown Timer	*Off*		
Stopwatch	*Off*		
Auto Answer	*On*		

*This feature/function will not be set back to default after reset.

Troubleshooting

Problem(s)	Possible cause(s)	Solution(s)
No dialling tone when pressing	- The base unit is not properly connected to the PC. - Too far from the base unit. - Battery is low (low battery icon is displayed).	- Check the connections. - Move closer to the base unit. - Charge battery.
icon is flashing.	- The handset is not registered. If the handset is unregistered, it displays UNREGISTERED. - The handset is out of range.	- Register the handset. Refer to section 11: *Register a handset*. - Move closer to the base unit.
When the handset is placed on the charger, no beep is heard.	- The handset is not placed properly on the charger. - Charging contacts are dirty. - The handset tone is turned off. - The handset's power is turned off previously.	- Take the handset off the charger and put it back again. - Clean charging contacts with a clean and dry cloth. - Turn on the handset tone from the Sounds Menu. - There will be no beep if the handset's power is turned off previously.
Battery icon remains empty although the handset has charged for 24 hours.	- Handset battery is defective. - Handset is not placed properly on the base unit or charger.	- Please contact your dealer to purchase new rechargeable battery. - Check to make sure the battery icon is scrolling.
No symbol on the display.	- Battery is uncharged. - The product is not properly connected.	- Charge battery. - Make sure your product is properly plugged in.
Bad audio quality (crackles, echo, etc.)	- Interference from nearby electrical appliance. - Base unit is installed in a room with thick walls. - The handset is too far from the base unit.	- Move the PC to a different location. - Install the base unit in a different room. - Move closer to the base unit.
Cannot hear the other party clearly/ speaker too loud/quiet	a. The speaker volume is set to minimum - The PC's speaker volume is set to minimum	b. See section 4: *Making calls – Adjusting the volume of caller's voice.*
The phone does not ring when a call comes in.	- The ringer is off.	- Turn on the ringer.
Contact list/ User status returns UNAVAILABLE message DISCONNECTED is shown during standby.	- The IM Service is not started or login. - The software is not started. - The USB is not plugged in. - The USB is connected to a USB hub/docking station which is not powered. - The PC is in standby/hibernate mode	- Check if both SKYPE and the software are started. - Check if the USB is plugged in. - If you are using USB hub or docking station, check if the USB ports are powered.
Cannot call ordinary phone number	- 00, + or 011 is omitted - Your SKYPE account has too little or no credit. - The handset has lost link	- Enter 00, + (press and hold 0) or 011 before the number to dial. - Check your account to see if you have enough credit. - Check to see if a link is established between then handset and the base. - Refer to section 4: *Making Calls – Calling Ordinary Phone* for information.
Busy tone is returned	- SKYPE or the PC application is/are not started. - The USB is not plugged in/ PC in standby/hibernate mode. - The contact to call is offline	- Make sure both SKYPE and the PC application is/are started on the PC and running properly. - Make sure the phone is setup correctly. Refer to section 2: *setting up your phone*. - Wait for the remote party to be online.

The CE marking certifies the compliance with technical regulations in accordance with the Directive 1999/5/EC for the safety of the user, electromagnetic perturbations and for efficient use of radio spectrum:

73/23/EC and 93/68/EC – Low Voltage Directive as per EN 60950-1
89/336 EEC – Electromagnetic Compatibility as per EN 310 489-1 and -6
99/5/EC – Effective use of Radio Spectrum as per EN 301 406

SERVICE

If your telephone needs service, please contact the store where you bought it. You can also find information on the web site

www.ondico.se

Ondico AB
www.ondico.se

13802 IB EN